

PS1000 / PS2000

Floor Scales CE



Shown with optional printer



Shown with optional indicator stand



Shown with optional remote display

- **Capacity**— 500 kg / 1000 lb and 1000 kg / 2000 lb
- **Accurate**— Provides consistent accuracy within 0.1% and comes equipped with an indicator for fast digital read out
- **Low Profile**— 64 mm / 2.5" high
- **Construction**— Rugged steel with tread plate surface protects animals and handlers from accidental slips and falls. Adjustable foot pads allow scale to work effectively on uneven floors.
- **Economical to Own**— There are no installation costs and no moving parts that require maintenance or adjustment
- **Versatile**— Accomplishes a multitude of weighing jobs: livestock, pets, feed carts, bulk containers, shipping and receiving
- **Portable**— The PS1000 weighs only 27 kg / 60 lbs, two easy access carry handles for easy relocation. No need for ramps or recessed floors, as this unit comes with ramped ends.
- **Overload Capacity**— Capable of withstanding 150% capacity of weight without damaging the scale
- **Animal Weighing Software**

VALUE IN
WEIGHING

PS1000 / PS2000 Floor Scales

Specifications

Capacity:

PS1000: 500 kg x 0.2 kg / 1,000 lb x 0.5 lb

PS2000: 1000 kg x 0.5 kg / 2,000 lb x 1.0 lb

Dimension:

PS1000: 1416 mm (L) x 514 mm (W) x 64 mm (H)
55.75" L x 20.25" W x 2.5" H

PS2000: 1498 mm (L) x 762 mm (W) x 64 mm (H)
59" L x 30" W x 2.5" H

Indicator: 164 mm (L) x 81 mm (H) x 29 mm (W)
6.5" L x 3.2" H x 1.2" W

Indicator Features:

Display: Five 16 mm (0.625") digits LCD

RS-232: 10' interface cable (DB-9) (included)

Keyboard: Hold/Print, Units, Tare, On/Off/Zero

Units: lb, kg, lb/oz

Power: Four AAA batteries or 6 VDC, 500mA
adapter (both included)

Optional UK Power Adapter: 816965002887

Optional EU Power Adapter: 816965002870

Battery Life: 20 hours

Operating Temp: 5° C to 35° C / 41° F to 95° F

Packaging Dimension:

PS1000: 1461 mm (L) x 559 mm (W) x 102 mm (H)
57.5" L x 22" W x 4" H

PS2000: 1626 mm (L) x 914 mm (W) x 178 mm (H)
64" L x 36" W x 7" H

Shipping Weight:

PS1000: 41 kg / 90 lb

PS2000: 102 kg / 224 lb

Options (not included):

Desk Stand: 816965003792

152 mm (L) x 76 mm (W) x 25 mm (H)

6" L x 3" W x 1" H

overall height: 486 mm / 19.125"

weight: 0.91 kg / 2 lb

Floor Stand: 816965002061

350 mm (L) x 350 mm (W) x 19 mm (H)

13.8" L x 13.8" W x 0.75" H

overall height: 914 mm / 36"

weight: 4.5 kg / 10 lb

Certifications: Full FCC compliance, UL/CUL power adapter

Product Code:

PS1000: 816965001460


PS2000: 816965003907



PS1000 shown with optional indicator stand



PS2000 shown with optional indicator stand

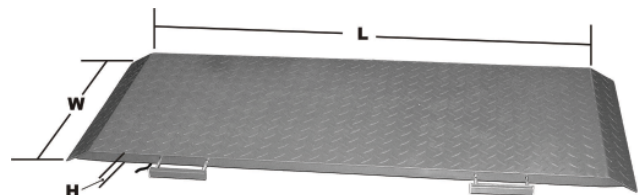

a division of Avery Weigh-Tronix, LLC

Brecknell

1000 Armstrong Dr., Fairmont, MN 56031
Toll free: 800-637-0529, Tel: 507-238-8702
Fax: 507-238-8271
e-mail: sales@brecknellscales.com
www.brecknellscales.com



Brecknell

Foundry Lane, Smethwick
West Midlands B66 2LP UK
Tel: +44 (0) 845 246 6717
Fax: +44 (0) 845 246 6718
Email: sales@brecknellscales.co.uk
www.brecknellscales.co.uk

