

Defender™ 3000

Wheeled Bench Scales





Wheeled frame structure



Quick-lock brake mechanism

Portability in a dependable and affordable package!

The OHAUS 3000 Series indicator combined with the Defender™ "T" model wheeled platform blends portability and performance into an affordable scale package. The wheeled platform and handle-bar column is an ergonomic design that allows moving without lifting the scale, and the durable slip-resistant polyurethane wheels can be easily locked to keep the scale securely in place. Featuring a rugged stainless steel pan, NTEP certified performance, and a durable plastic indicator with flexible viewing positions, counting, backlit LCD display and built-in rechargeable battery operation, the OHAUS Defender 3000 Series wheeled bench scale is the affordable solution to your rugged and portable weighing applications.

Standard Features Include:

- Two capacities: 500 lbs (250 kg) and 1,000 lbs (500 kg) with 20 x 28 in (51 x 71 cm) stainless steel pan
- Painted steel handle-bar column and polyurethane wheels with quick-lock/unlock brake mechanism
- 1:5,000 default resolution
- 1:2,500 NTEP certified/Measurement Canada approved Legal-for-Trade resolution
- Indicator features high-impact ABS plastic housing with painted steel adjustable viewing bracket
- 1 in (25 mm) high LCD display with high-contrast backlight
- Multiple weighing units: lb, oz, lb-oz, kg, g
- Parts counting mode with selectable sample sizes, auto-retention of last sample size, and reference display of APW
- Built-in bi-directional RS232C for printing or connection to PC
- Power via AC adapter or 120-hour internal rechargeable lead acid battery

DefenderTM 3000 Wheeled Bench Scales

Specifications

| Scale Models | D31P250TX | D31P500TX |
|--|--|--|
| Capacity x Readability (default: cal unit lb) Capacity x Readability (cal unit kg) | 500 lb x 0.1 lb / 227 kg x 0.05 kg 250 kg x 0.05 kg / 551 lb x 0.2 lb | 1,000 lb x 0.2 lb / 454 kg x 0.1 kg 500 kg x 0.1 kg / 1,102 lb x 0.5 lb |
| Capacity x Certified/Approved Readability | 500 lb x 0.2 lb 250 kg x 0.1 kg | 1,000 lb x 0.5 lb 500 kg x 0.2 kg |
| Pan Dimensions (W x D) | 20 x 28 in / 508 x 710 mm | |
| Base Construction | 304 stainless steel pan with painted steel frame, polyurethane wheels with locking mechanism, external level indicator | |
| Column | 40.5 in (1,030 mm), fixed height tubular painted steel with handle bar | |
| Safe Overload Capacity | 150% of rated capacity | |
| Load Cell | 350 Ω, IP67 aluminum, 2mV/V, 5-15V DC/AC | |
| Indicator | T31P indicator with ABS plastic housing and painted carbon steel U-mount bracket with angle adjustment knobs | |
| Weight Display | 1 in (25 mm) high, 6-digit, 7-segment LCD with high-contrast white LED backlight | |
| Weighing Units | lb, oz, lb-oz, kg, g | |
| Extra Functions/Modes | Parts Counting (min APW 1d) | |
| Keyboard | 4 function mechanical switches, raised with positive feedback | |
| Stabilization Time | Within 2 seconds | |
| Auto-zero Tracking | Off, 0.5, 1 or 3 divisions | |
| Zeroing Range | 2% or 100% of capacity | |
| Span Calibration | 5 lb/kg to 100% of capacity | |
| Interface | Bi-directional RS232 | |
| Operating Temperature Range | 14°F to 104°F / -10°C to 40°C | |
| Power | 9-12 VDC, 0.5A, AC adapter with internal rechargeable lead acid battery (100-hour typical operation on full charge) | |
| Scale Net Weight | 88 lb / 40 kg | |
| Shipping Dimensions (W x D x H) | 30.7 x 46.1 x 10.6 in / 780 x 1170 x 270 mm | |
| Shipping Weight | 101 lb / 46 kg | |

| Accessories | Ohaus Number |
|--|--------------|
| RS232 Interface cable to PC 25-pin | 80500524 |
| RS232 Interface cable to PC 9-pin | 80500525 |
| RS232 Interface cable to 80252042 dot matrix printer | |
| RS232 Interface cable to 80251992 thermal printer | 80252581 |
| Compact dot matrix impact printer | 80252042 |
| Compact thermal printer | |

Approvals:


• Safety: _cUL_{us}, CE

• EMC: FCC, ICES, CE Class A

• Legal for Trade: NTEP CC 08-066 A1 (indicator) / CC 09-056 (base) Measurement Canada AM-5713C Rev. 1 (indicator) / AM-5723 (base)

• Quality: OHAUS quality management system registered to ISO 9001:2008

Outline Dimensions

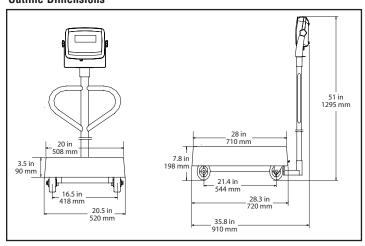

OHAUS CORPORATION

7 Campus Drive Suite 310 Parsippany, NJ 07054 USA

Tel: 800.672.7722 973.377.9000 Fax: 973.944.7177

www.ohaus.com

With offices throughout Europe, Asia, and Latin America

* ISO 9001

Registered Quality Management System

