


# D series Price Computing SCALES



- Up to 99 Easy-to-Add PLUs for Quick Reference (14 direct and 85 indirect)
- Displays Weight, Unit Price, and Total Price with Operator and Customer Views
- Built-in Rechargeable Battery Pack and AC Adapter Included
- NTEP Legal for Commercial Trade - Accuracy Class III

# D series Price Computing SCALES

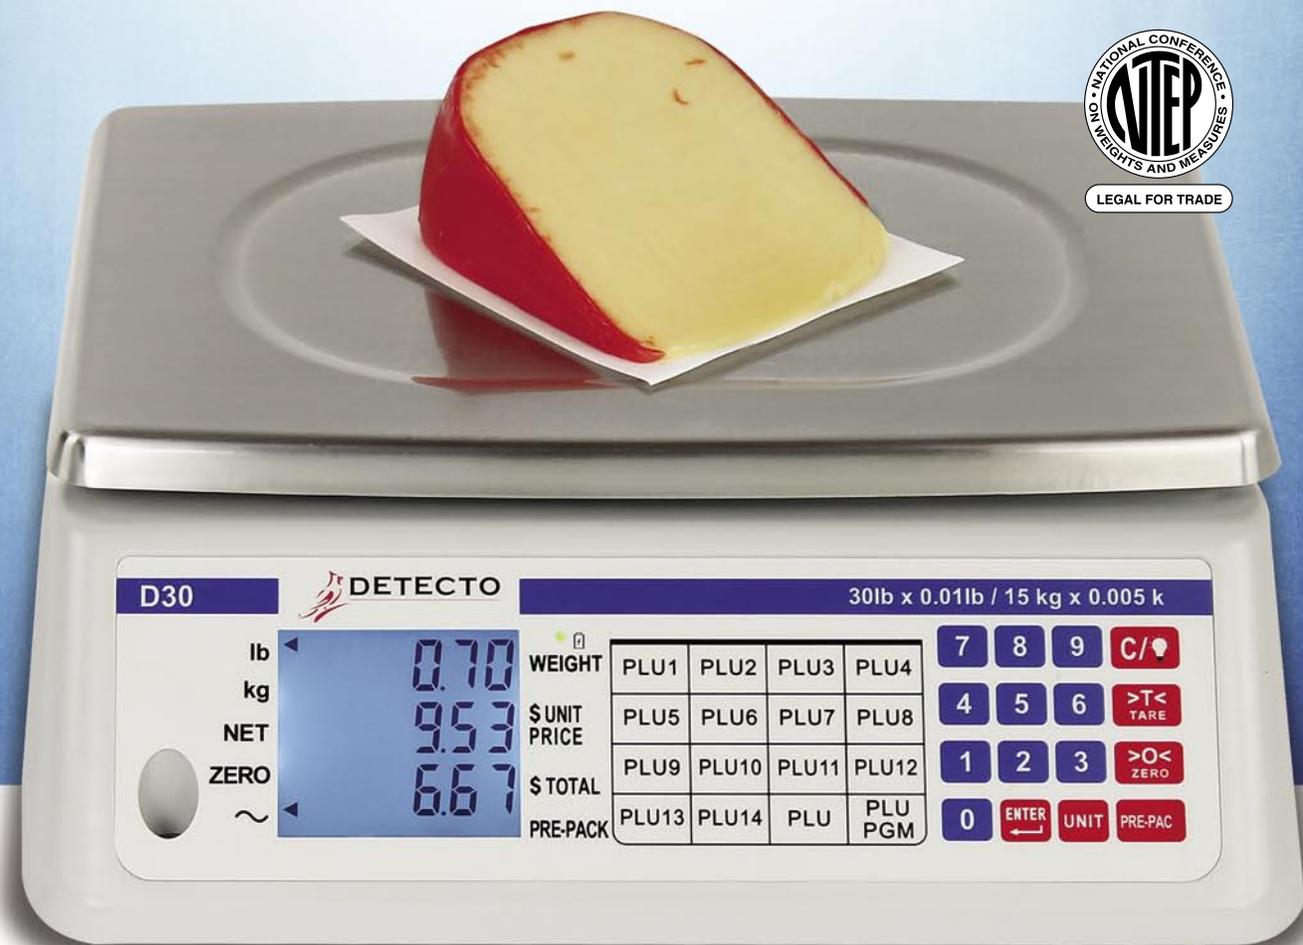

Detecto Model D30  
Price Computing Scale

## Easy-to-Read Backlit LCD Stainless Steel Washdown Platform

DETECTO's low-profile D series price computing scales offer up to 99 easy-to-add PLUs for fast reference (14 direct quick keys and 85 indirect PLUs). The D series displays Weight, Unit Price, and Total Price on the front and rear backlit LCDs (up to six 0.5-in / 13-mm high digits) for both the operator and customer to view simultaneously. The D series offers accurate and reliable weighing for farmers markets, delis, bakeries, candy kiosks, coffee shops, convenience stores, produce markets, and hardware stores. Auto Shut-off, Sleep, and Backlight Off modes extend the retail scale's battery life.


The NTEP legal-for-trade scale's Pre-Pack key saves time by retaining the Unit Price and Tare for repetitive price computing, making the operator's job even faster. Adjustable, nonskid feet and internal bubble level ensure steady and accurate weighing, plus a beep provides audible confirmation of key presses. Weighing capacities range from 15 lb x 0.005 lb / 6 kg x 0.002 kg up to 60 lb x 0.02 lb / 30 kg x 0.01 kg. The high-grade, molded polymer enclosure with color-coded sealed membrane keypad and lift-off, wash-down stainless steel platform make cleaning easy.



## Rechargeable Battery Pack for Cordless Use in Kiosks and Farmers Markets

DETECTO's D series price computing scales offer a dual power source of rechargeable battery pack and 110/120VAC 50/60 Hz adapter (included). Charge it up and it will last 120 working hours of continuous use with the backlight turned off.

# OPERATOR VIEW

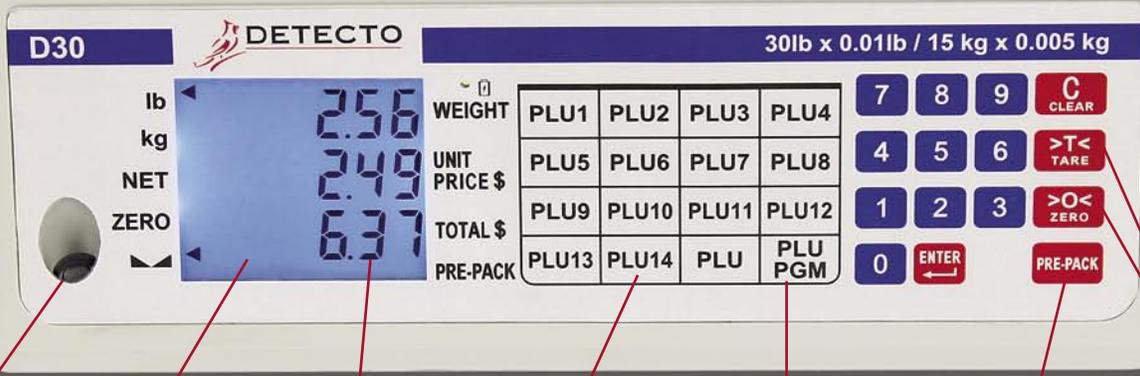

Bubble Level

Backlit Display

0.5-in/13-mm H  
LCD Digits

14 Direct PLUs  
(99 total)

Quick and Easy to  
Add PLUs

PRE-PACK Retains  
Unit Price and Tare

ZERO and  
TARE keys





**Weight, Unit Price, and Total Price Shown Simultaneously  
on the Front and Back Operator and Customer Displays**

# CUSTOMER VIEW

Displays  
up to 6 digits




# D series Price Computing SCALES

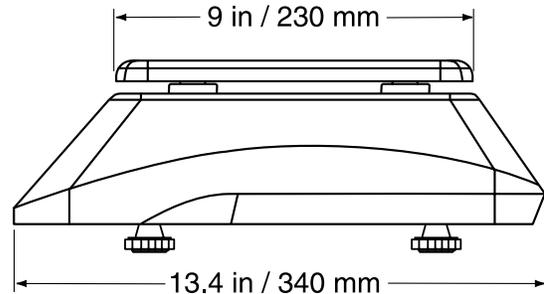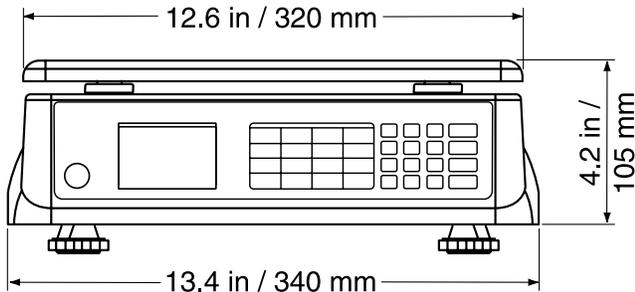

Model	D15	D30	D60
Capacity / Divisions	15 lb x 0.005 lb / 6 kg x 0.002 kg	30 lb x 0.01 lb / 15 kg x 0.005 kg	60 lb x 0.02 lb / 30 kg x 0.01 kg
UPC Code	809161190403	809161190502	809161190601
Display	0.5-in/13-mm high, 7-segment LCD with backlight Weight: 6 digits Unit Weight: 6 digits Total Price: 6 digits		
Power	12 VDC 1.0A rechargeable battery pack (included) or AC adapter 110/120 VAC 50/60 Hz (included)		
Battery Operation	120 working hours of continuous use without backlight turned on / 60 hours with backlight turned on		
Leveling Components	4 adjustable rubber feet and integral front-mounted level bubble indicator		
PLU	Up to 99 Price Look Ups (14 direct quick keys and 85 indirect)		
Zero	Established on power up routine and maintained by auto-zero circuitry		
Tare	100% of full scale capacity		
Operating Temperature	14° to 104° F (-10° to +40° C)		
Storage Temperature	-13° to 122° F (-25° to +50° C)		
Scale Construction	High-grade molded polymer		
Platform Construction	Stainless steel		
Product Weight	7.9 lb / 3.6 kg		
Shipping Weight	11.4 lb / 5.2 kg		
NTEP	Certificate of Conformance No. 13-058		
Accuracy Class	III		

*Detecto Scale reserves the right to improve, enhance, or modify features and specifications without prior notice.*

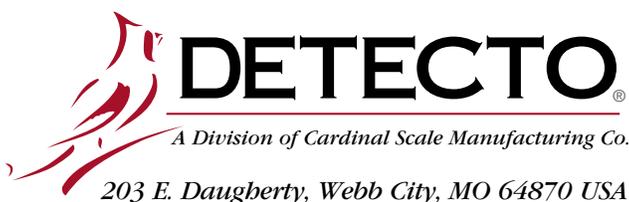

203 E. Daugherty, Webb City, MO 64870 USA  
Ph: 417-673-4631 or 1-800-641-2008 Fax: 417-673-5001  
[www.Detecto.com](http://www.Detecto.com)

**Mobile:** [m.detecto.com](http://m.detecto.com)

**SOLD BY:**